

Directions for Resetting SSJR to Factory Default

Note: If PDU has a LAN connection, it will NOT reset the LAN.



1. Turn off power to the unit. (Unplug it if possible)
2. Insert a jumper (paper clip bent into a u-shape will work) as shown in the picture into the right RS-232 port. (Middle hole top row and first hole in bottom row.)
3. Turn on the power and wait for the unit to click more than 3 times. After clicking more than three times, remove power from the unit and take out the jumper. This jumpering will reset the eprom of the PDU. This will reset every thing back to factory default.
4. Turn power back on and the unit should sequence back up if the circuit breaker is on the "ON" position.